3. Disassembly and Reassembly

3-1. Disassembly of CASE-CYCLONE ASSY

1) Pull out CASE-CYCLONE ASSY From the body of VACUUM CLEANER.

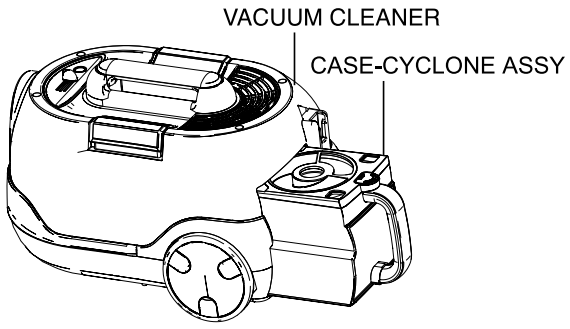

2) Detach COVER-CYCLONE ASSY from CASE ASSY.

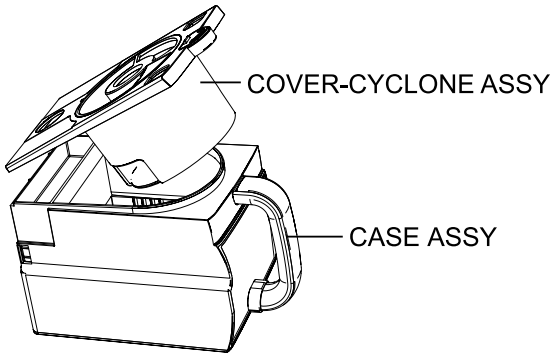

3) Remove CAP-COVER CYCLONE, HOLDER-SPONGE ASSY and FILTER CYCLONE from COVER-CYCLONE.

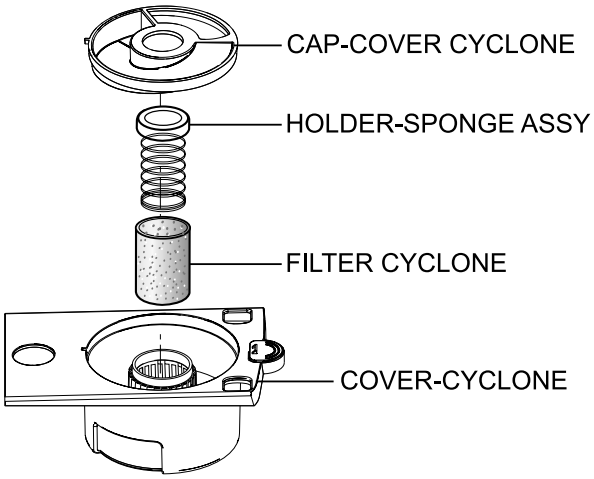

4) Remove GRILLE-HEPA ASSY and BRUSH-CYCLONE ASSY from CASE ASSY.
5) Remove HANDLE-CYCLONE UP from CASE-ASSY and then, remove 2 screws, using (+) screwdriver to remove HANDLE-CYCLONE LOW.

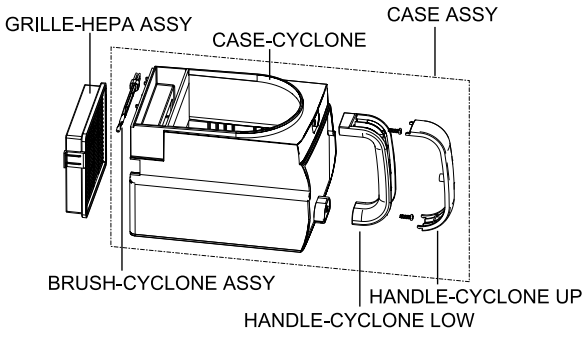

3-2. Disassembly of BODY-MID ASSY

1) Detach BUTTON-SWITCH and BUTTON-C/REEL with a fiat head screw driver.

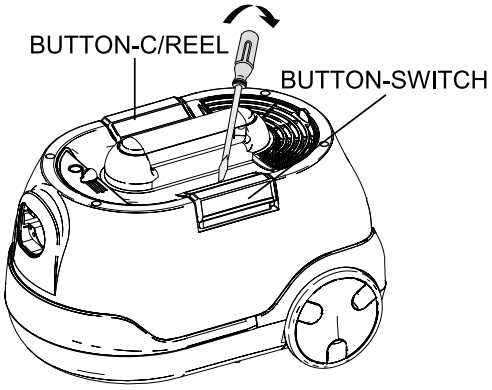

2) Remove GRILLE-BACK and MICRO FILTER from the body of VACUUM CLEANER.
3) Using sharp metal, remove CAP-SCREW(4pcs) and then, loosen 6 screws and detach BODY-MID.

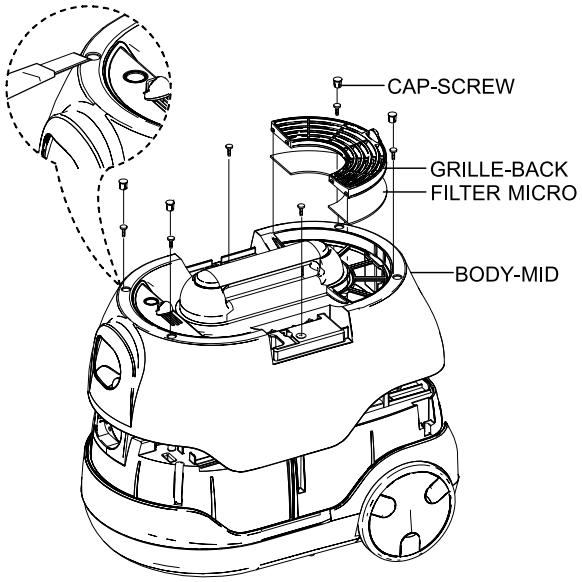

4) Remove HANDLE ASSY, HOLDER-HANDLE, DUCT-OUTLET and PANEL-CONTROL ASSY from BODY MID.

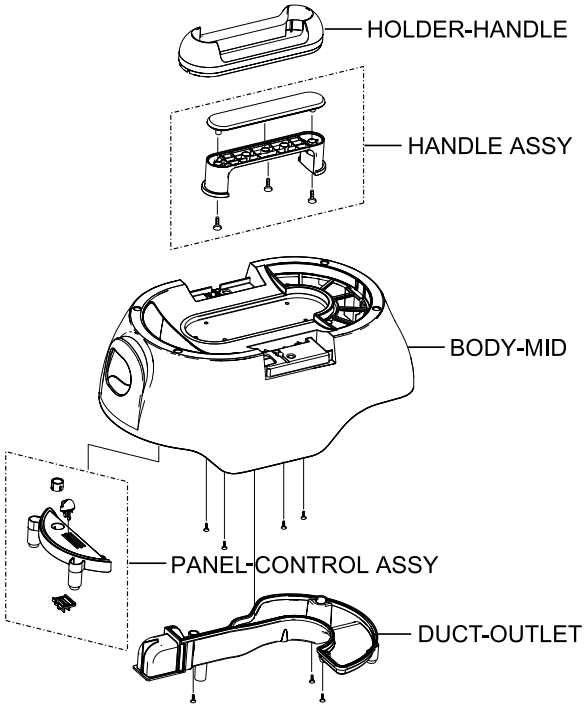

3-3. Disassembly of PBA MAIN

1) Remove the connector-wires from PBA MAIN.
2) Loosen 1 screw and remove PBA-MAIN.
3) Loosen 1 screw and remove PBA-LAMP.

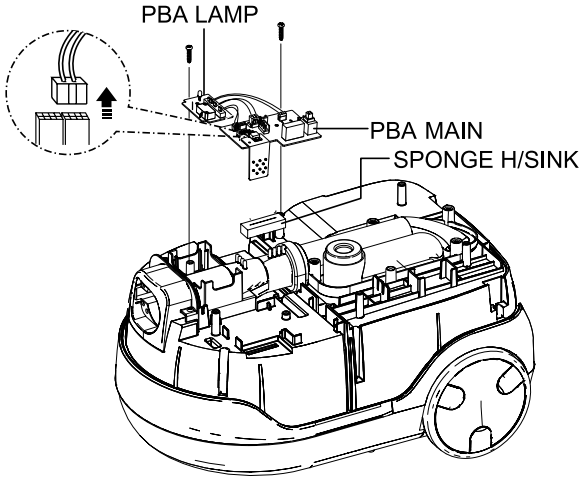

3-4. Disassembly of BASE-UP ASSY

1) Remove CAP-AIR, SEAL-OUTLET, DAMPER-ASSY and SWITCH-PRESSURE from the BODY BASE-UP.

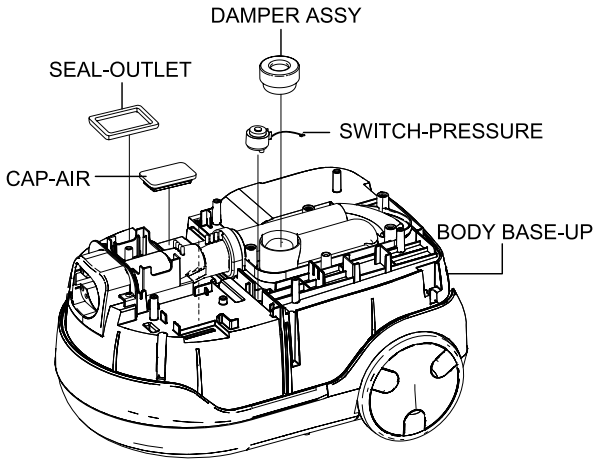

3) Loosen 2 screws and detach DUST-INLET.
4) To remove DUCT-CYCLONE and SEAL-DUST, remove 5 screws.

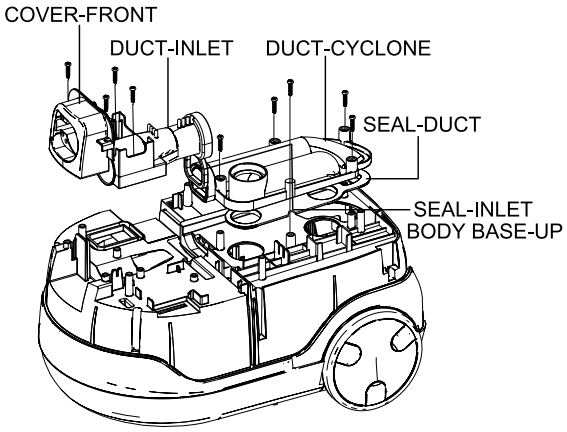

5) Loosen 7 screws and detach BODY BASE-UP.

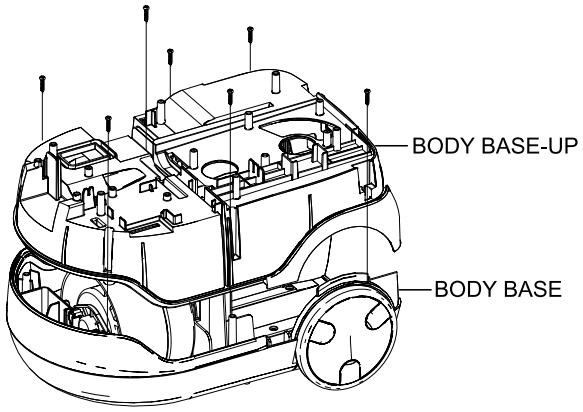

3-5. Disassembly of BODY-BASE ASSY

1) Remove BAND-BODY, COIL-HARMONIC, COVER-BASE and GRILLE FILTER ASSY from BODY-BASE.

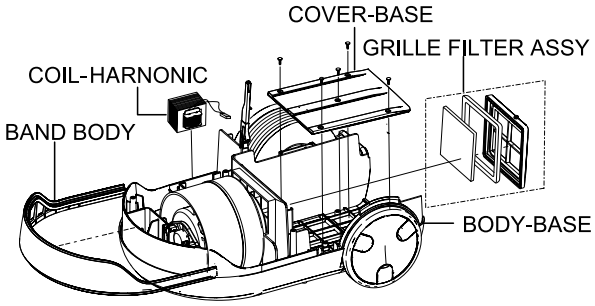

3-6. Disassembly of MOTOR

1) Separate MOTOR from BODY-BASE.
2) Separate SUPPORT-MOTOR ASSY, SPONGE MOTOR and CUSHION-MOTOR F from MOTOR FAN AC.
3) Separate the W/HARNESS-MOTOR from MOTOR-FAN AC.

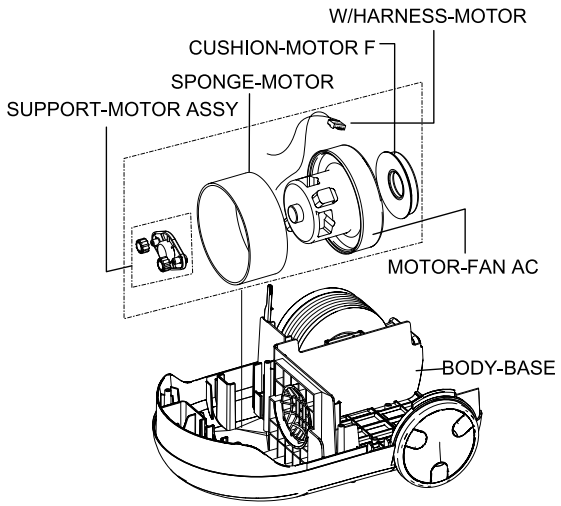

2) Separate CORD-REEL ASSY.
3) Remove LEVER-BRAKE ASSY from BODY-BASE.

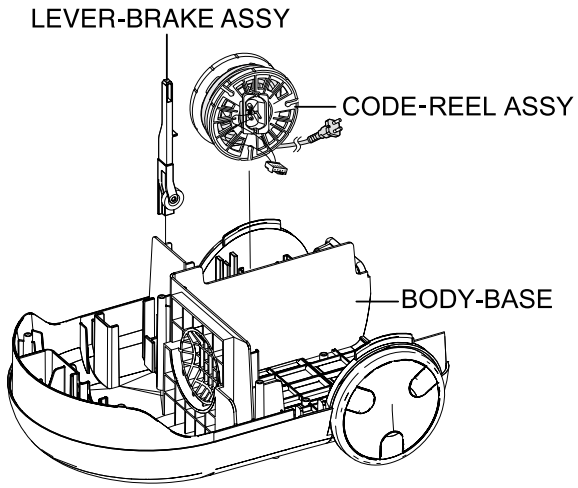

3-7. Disassembly of CORD REEL ASSY

1) Detach GUARD-CORD With a fiat head screw driver.

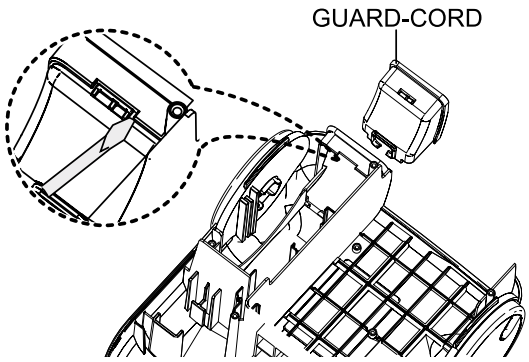

3-8. Assembly of CORD-REEL ASSY
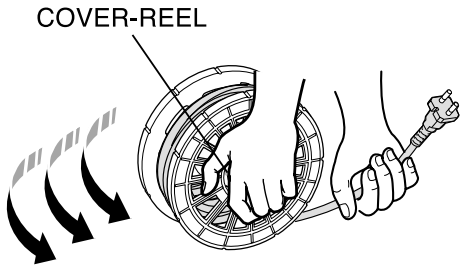
1) Hold COVER-REEL and wind the power cord 4~5times.
2) When winding is completed, reassemble CORD-REEL ASSY immediaterly into the body.